



Pressing for Excellence

A woman with dark hair pulled back, wearing a black business suit over a white collared shirt, stands with her arms crossed and a slight smile. The background is a vibrant blue, with a large, close-up, slightly blurred image of blue fabric on the left side. A semi-transparent dark blue rectangle is positioned behind the text.

# IRONING TECHNOLOGY FOR TEXTILE CARE

# IRONS, CONNECTION UNITS, ACCESSORIES

## VEIT HP 2003 HIGH-PRESSURE IRON

This model of the VEIT 2000 series, with many satisfied users all around the globe, is optionally available with the electronic VEITronic\* control unit. With its obvious benefits such as maximum operating safety and a long life cycle, excellent steam quality combined with exact temperature regulation and its ergonomic design, the VEIT HP2003 will convince you.



Ergonomic handle for user-friendly ironing



**VEIT 2129 THERMOSTAT-CONTROLLED IRON WITH HAND PROTECTION**  
As in HP 2003, the micro-switch for releasing steam is integrated into the ergonomically shaped handle. Includes electric connecting cables and steam pipes.



**VEIT 2210 CONDENSOR**  
This connecting unit ensures perfect steam quality in steam supply machinery thanks to its gravity-based condensate trap. The condensor is suitable for an operating pressure of up to 6 bar and is optionally available with a support stand.



**VEIT 2215 STEAM ADAPTER**  
For integration into (central) steam piping. Steam is released through a solenoid valve. The integrated ball valve allows the separation of the solenoid valve from the steam supply.



**ACCESSORIES**  
Even the best ironing table will fail to provide ideal ironing results without the matching accessories. This is why we have put great emphasis on these components to offer you a suitable range of accessories.

\* VEITronic comes as a standard in VEIT Varioset ironing tables.

# STEAM GENERATORS

VEIT steam generators meet the highest safety standards. All European rules and regulations on manufacturing pressure units are strictly adhered to at VEIT. Our components and assembly units are subject to permanent quality checks.

The range of VEIT steam generators with power capacities from 2.2 to 120 kW provides the most suitable steam for any purpose.

## VEIT 2373 HIGH-PRESSURE STEAM STATION

The VEIT 2373 steam station is available in four versions with different power levels. Connected loads of 13.5 kW / 18 kW / 24.5 kW and 30 kW generate approximately 18 kg / 24 kg / 33 kg and 41 kg of high pressure steam. The stainless steel feedwater tank and the blow-down tank come as standard.



## VEIT 2381 HIGH PRESSURE STEAM STATION

This steam station is available with connecting loads of 40 kW, 50 kW and 60 kW and can generate approximately 55 kg, 68 kg and 82 kg of high pressure steam. This steam station is also available in a twin version with 120 kW. The compact unit comes with an integrated stainless steel feedwater tank and a stainless steel blow-down tank. The capacious steam boiler with a total volume of 75 litres reliably provides steam for the connected steam consumers.



## VEIT SG 66 MF

This small, long-life and value-for-money steam generator with stainless steel boiler comes with a solenoid valve connector and supplies steam for one high-pressure iron. If the water quality is adequate\*, tap water can be used for operating the steam generator.

## VEIT SG 66

This steam generator comes with a solenoid valve connection and supplies steam for one high pressure iron. It can be connected to direct water or to feed watertanks. The VEIT SG 66 perfectly matches VEIT Varioset and Varioline ironing tables.

## VEIT SG 67

This small steam generator is equipped with two solenoid valves and is thus perfectly suitable for connecting with two high-pressure irons. A direct water connection is optionally available.



\* To check the water quality, please refer to the manual.

# VEIT VARIOLINE CR2

PROFESSIONAL SUCTION AND BLOWING TECHNOLOGY FOR FIRST-TIME USERS

- › Strong suction and blowing power
- › Manual adjustment of suction and blowing power
- › Gas-pressured springs for easy and infinitely variable height-adjustment
- › Ergonomically designed swivelarm for an optimised working position for the operator
- › Thanks to the strong suction, ironing surface does not need to be heated



### VEIT VARIOLINE CR2

The VEIT Varioline system for ironing tables is based on the VEIT Varioset. The easy-to-operate electrical switch between blowing and suction and the universally usable ironing surface render this system highly flexible in use.

Available with integrated and/or adapted steam generator. (See page 3)



### IRONING SURFACES

The VEIT Varioset and Varioline ironing table can be equipped with various ironing surfaces in a modular system. For example:

- CR2 ironing surface:** 1400 × 500 × 300 mm
- Dress board ironing surface:** 1200 × 460 × 330 mm
- Flat top ironing surface:** 1300 × 650 mm

## VEIT VARIOSET CR2



### VEIT VARIOSET CR2

This multi-purpose ironing table with suction and blowing can be integrated into any process.

All kinds of garments can be easily and efficiently handled on the special ironing surface, maintaining high quality standards on a mere two square metres.

### VEIT COLD IRONING TECHNOLOGY FOR VARIOSET AND VARIOLINE

Thanks to the combination of powerful blowing with a **plastic surface**, condensate can be avoided. Thus, the ironing surface does not need to be heated, which in turn results in energy savings of up to 60 %. Plus you will get a better ironing result!

### SWIVELARM

When ironing on the swivelarm, the entire airflow is transferred to it. You can thus use the full suction and blowing power on the swivelarm. Again, the strong suction will keep the cover dry and ensure the best possible ironing result.



### ELECTRONIC CONTROL UNIT

By the push of a button, you can control the suction and blowing power through the electronic control unit. Set and actual temperatures of the iron are accurately shown to the degree.



### SPOTTING UNIT

The spotting unit with swivelarm bracket, stainless steel spotting pad and collection tank is optionally available. Suction is activated through a foot pedal and is re-directed to the swivelarm if the latter is in use.



### UNIVERSAL IRONING SURFACE / EXTENDABLE EGG-SHAPED FRONT TIP

Use the specially designed ironing surface CR2 for fast and efficient ironing of all kinds of garments.

An extendable oval front tip is optionally available and is recommended for ironing wide parts such as chest areas.

# VEIT 8363 MULTIFORM FINISHER BASIC

## VEIT 8363 MULTIFORM FINISHER BASIC

The VEIT 8363 Multiform series is a completely new product. Both models (Basic and Classic) allow finishing of outer garments in all current sizes with a length of 620 to 1420 mm (or 820 to 1620 mm with the adapter) and hem sizes from 940 to 1660 mm.



- > Good value for money
- > High efficiency
- > The easy handling of the finisher will allow you to exactly set all parameters. You can fine-tune them perfectly to the requirements of the garments to be finished.
- > Adjustable shoulder width from 320 to 520 mm.
- > The bust can be pneumatically height-adjusted and adapted to the length of the garment through the operating panel.
- > The powerful and energy-saving blowing function can be manually controlled and is suitable for all fabrics.
- > The integrated stretching device lifts the bust during the steaming process (adjustable) and improves the finishing quality.
- > The removable panel clamp comes as a standard.
- > For fine fabrics, the lateral tensioners as well as the front and back clamps can be switched off.

VEIT Smart Engineering  
(see page 20)



## GREAT PERFORMANCE ON LITTLE SPACE

In order to save even more space, the VEIT 8363 (Classic and Basic) is also available with an integrated 9kW steam generator.



## THE OPERATING PANEL

with its clear design is easy to use. The front and back clamps, side tensioners and the re-stretching function can be easily switched on or off. Also, blowing power can be electronically regulated with the operating panel.



# VEIT 8363 MULTIFORM FINISHER CLASSIC

## Belt drive for exact stretching



### VEIT 8363 MULTIFORM FINISHER CLASSIC

- > High efficiency
- > The powerful and energy-saving blowing function can be manually controlled and is suitable for all fabrics.
- > The 8363 Classic version provides excellent results even for challenging fabrics and structures.
- > An electric tooth belt drive for height adjustment allows very exact and delicate re-stretching of the garment to avoid over-stretching or mis-shaping.
- > Height adjustment is performed automatically through a photocell.
- > Pneumatically operated side-vent clamps come as a standard and help you to finish jackets and blazers in perfect quality.
- > The rotatable bust facilitates the correct loading of the machine.
- > The new VEITouch control unit is easy to operate and provides memory space for 10 programs.
- > Adjustable shoulder width from 320 to 520 mm.
- > The removable lapel clamp comes as a standard.

### VEIT Smart Engineering (see page 20)


BODY FIT	O-STRETCH
BELT DRIVE	D-AIRFLOW
	VEITOUCH



Pneumatic side-vent clamps can be additionally switched on for easy and mark-free finishing of jackets with side vents.



Not only classical garments can be finished but also many textiles for sports and leisure, coats and jeans jackets.

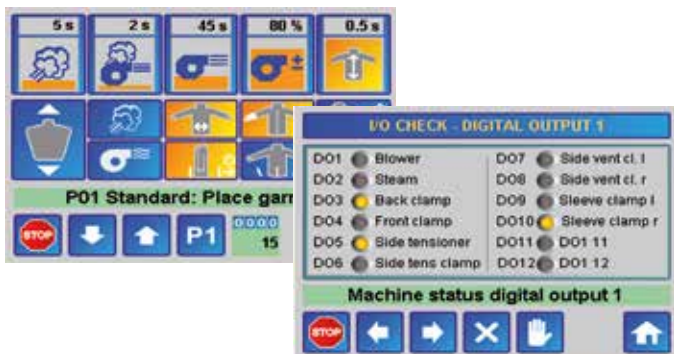

**THE VEITouch-CONTROL UNIT** is equipped with a 5.7" touch-screen colour display which shows all essential functions and parameters at one glance. Also, you can store ten program settings and retrieve when needed. For service and maintenance purposes, all functions can be manually controlled through the display. All input and output functions can be checked at the display. Thus, any defective parts can be identified quickly in the event of disorders. This keeps service costs low.

## VEIT 8741 PANTS FINISHER

### VEIT 8741 PANTS FINISHER LONGITUDINAL TENSIONER

The basic version with longitudinal tensioner provides a rational and low-cost finishing of short and long trousers. Inner and outer tensioners, the anti-stretch in the longitudinal tensioning as well as a strong warm-air-fan guarantee an excellent price-performance ratio and come as a standard.



### THE VEIT 8741 PANTS FINISHERS FOR VERTICAL AND HORIZONTAL STRETCHING

- › Belt drive for a precise "Stretch Control Function"
- › Overstretch function to lengthen pants after the washing process
- › Inner hem tensioners to avoid marks on delicate fabrics
- › Powerful yet energy-efficient fan
- › Short-Trousers-Function
- › Optionally available for pleated waistbands



#### THE INTEGRATED STEAM GENERATOR

For great performance on a limited space: The VEIT 8741 Pants Finisher with an integrated 9 kW steam generator.



#### LONGITUDINAL WAISTBAND TENSIONER

The longitudinal waistband tensioner tensions waistband sizes from 58 cm to 129 cm.



**VEIT 8741 PANTS FINISHER LATERAL TENSIONER**

The lateral tensioning system guarantees an ideal forming in the waistband area due to two-dimensional movable tensioning elements. The lateral tensioner is also the basis for the Anti-Stretch-Function in the waistband area.



**Belt drive for exact stretch control function**

VEIT Smart Engineering  
(see page 20)

- BODY FIT**
- BELT DRIVE**
- O-STRETCH**


**LATERAL WAISTBAND TENSIONER**

The unique VEIT waistband tensioning system "Body" forms the pants' waistband according to the shape of the human body. Unlike other Pants Finishers, which stretch the waistband only sideways, VEIT's waistband tensioning system "Body" also extends the pants' waistband to the back. Suitable for waistband sizes from 48 to 160 cm.



**THE PATENTED DRIVE SYSTEM**

The patented drive system allows exact longitudinal tensioning with an integrated Anti-Stretch function and avoids overstretching of the garment. The belt drive provides a smooth and gentle movement of the hem tensioning unit. The clamping position, from long pants to shorts, can be changed automatically by using the foot switch. The manual adjustment is no longer necessary.

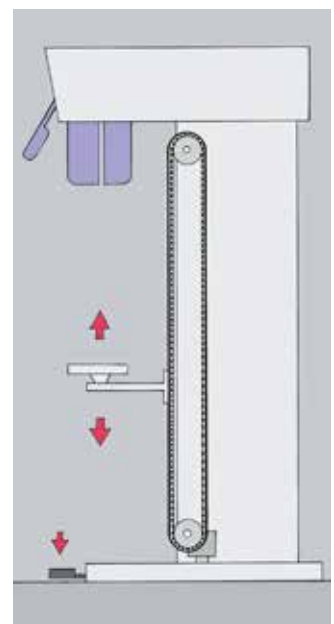

## VEIT 8319 UNIVERSAL FINISHER / SHIRT FINISHER

### VEIT 8319 / VEIT 8319 E UNIVERSAL FINISHER / SHIRT FINISHER

This universal finisher is the preferred equipment for small to medium-sized laundries and textile care plants. Spin-dry shirts, blouses, smocks or chefs' coats are finished quickly without creases by the low-noise high-performance hot-air fan.

Dry garments, such as jackets, coats, etc. can also be finished on this machine.

Also available as electrically heated version VEIT 8319 E.

**Belt drive with integrated re-stretching function**

**Also available with electrical heating**



VEIT Smart Engineering  
(see page 20)

BODY FIT



BELT DRIVE



O-STRETCH



### VEIT 8319 UNIVERSAL FINISHER, OUR MULTI-TALENT

- › Also available as a shirt finisher with electrical heating
- › Automatic height detection
- › Ideal for chef's coats, smocks and hospital attire
- › Pneumatic sleeve tensioners for short and long-sleeved shirts
- › VEIT belt drive with integrated re-stretching function

PROFESSIONAL APPLICATIONS:



**THE OPERATING PANEL**

The operating panel with its clear design and easy handling controls the individual steps in the finishing process. The hand finisher for touch up is positioned for a fast ergonomic access.

**SIDE VENT FIXING DEVICE**

The automatic side vent fixing device is not only used on side vents, but is used generally for fixing the shirt or smock seams.

**AUTOMATIC HEIGHT DETECTION**

A photocell sensors the height positioning. This allows exact height adjustment of the tensioning unit by our Belt-Drive-System.

**ACCESSORIES: EXCHANGE KIT WITH SUPPORT STAND**

By simply exchanging the front clamps, this compact steam-heated Universal Finisher can be modified for finishing dry-cleaned garments.

# VEIT SF 26 SHIRT FINISHER PREMIUM

## VEIT SF 26 SHIRT FINISHER PREMIUM

The high performance blowing finisher is best suited for laundries and textile care plants with high shirt appearance.

The powerful hot-air fan in combination with the heating register account for fast and efficient drying.

The low construction height and the retractable front clamp allow easy handling.

The VEITouch control unit shows all functions at one glance. Various shirts of different sizes, shapes and materials can be finished on this machine efficiently to the highest quality standard.

VEIT Smart Engineering\*  
(see page 20)

BODY FIT 	BELT DRIVE 	0-STRETCH 
D-AIRFLOW 	VEITOUCH 	



Fast and energy-efficient drying of the button-facing with **VEIT Direct Airflow\***. The special airflow and the powerful fan allow optimised drying.

The hem clamp unit and the **side-vent clamps** are particularly permeable to air for fast drying of the side seams and crease-free fixation of the shirt hem.

Long sleeve and short sleeve shirts can be fixed without marks on the three-dimensional **form sleeve tenioners**. The pneumatic height adjustment of the sleeve tenioners can be controlled for one side or both sides together.

## VEIT SF 26 SHIRT FINISHER BASIC & EMOTION

### VEIT SF 26 SHIRT FINISHER BASIC

This high-performance blowing finisher was designed for laundries and textile care shops that focus on high productivity. The Basic version of the VEIT SF 26 Shirt Finishers differs from the Premium version as follows:

- › combined tensioner for long sleeves and short sleeves
- › no side-vent clamp

### FLEXIBLE BUST SIZES\*

- › Bust S – perimeter 690 mm for blouses
  - › Bust SL – perimeter 780-940 mm
- For bust SL, shoulder width is adjustable from 43 to 54 cm. Shoulder width for bust S is 42 cm (not adjustable). Hem diameters vary with bust sizes:
- › S: 88–150 cm › SL: 90–170 cm

For bust SL, an **automatic unloading station** is optionally available to shorten cycle times and increase productivity.

**Indication: Picture includes special equipment (premium version).**



**Unique option with moisture control:  
The process ends when the shirt is dry**



### **eMotion** HEAT RECOVERY SYSTEM\*

The optionally available heat recovery system absorbs the radiated heating energy and dries the humid air with the help of a heat exchanger. Your benefits:

- › considerable energy savings of up to 30 per cent
- › increased drying performance – shorter process cycle times
- › less heat radiated to the surroundings
- › pleasant room climate thanks to the reduced humidity
- › lowers room temperature by up to 4°C

### **eMotion** MOISTURE CONTROL\*

The optional moisture control unit shortens cycle times and saves energy. The unit is unique on the market. During the drying process, it permanently measures the residual moisture in the shirt and the shirt's dryness in the front pocket. As soon as the shirt is dry, it automatically switches off the blowing. No operator intervention is required for exact and fast drying of the shirt. With this VEIT control an energy-consuming heated front clamp is redundant.

\* These options are available for VEIT SF 26 Premium and VEIT SF 26 Basic Shirt Finishers.

## VEIT 8900 SHIRT PRESS

### VEIT 8900 SHIRT PRESS

A pressed shirt maintains its form better than a regularly finished shirt. The Shirt Press is a powerful alternative to traditional shirt finishers in laundries or textile care plants with considerable amounts of shirts to be processed. The moulded heating system provides an excellent temperature distribution and saves energy. During the pressing process, the shirt is stretched downwards. Both long-sleeved and short-sleeved shirts can be processed. With the VEITouch control unit, the different programs can be easily selected.

The VEIT 8900 Shirt Press comes with pneumatically height-adjustable sleeve tensioners for better results and quality. Tedious manual touch-up work is redundant.

The sleeve tensioners for long-sleeved and short-sleeved shirts come as a standard. The heat accumulation plate ensures fast drying of the seams. The new optional cuff-tuck-press gives the sleeve the perfect finish.

Fast cycle times with perfect results

Also suitable for Slim Line shirts



VEIT Smart Engineering\*  
(see page 20)

BODY FIT



VEITOUCH



The unique form of the back pressing plate and the VEIT bust geometry ensure perfect pressing results even for the back part of the garment. It does not matter if the shirt has one centre pleat or two side pleats at the back. Slim Line shirts can also be easily pressed on VEIT 8900.



## VEIT 8905 COLLAR / CUFF PRESS

### VEIT 8905 COLLAR / CUFF PRESS

The three-part collar / cuff press with its specially shaped upper buck made of polished stainless steel dries collar and cuffs quickly and provides an excellent finish. The vertical closing movement is activated by foot switch. The soft cover system prevents marks and button damages.

The safety frame at the upper buck as well as the variable drying-time adjustment by potentiometer come as a standard. You save space due to the compact design.



The built-in suction in the lower bucks guarantees a safe positioning of the cuffs and collar and a fast cool-down after pressing.



### THE IDEAL CUFF-AND-COLLAR PRESS

- > Vertical closing movement
- > Excellent power transmission
- > Optimised cycle times
- > Hands-free operating
- > Integrated suction
- > Little space required
- > Soft cover system to protect buttons
- > Upper buck made of polished chrome-plated stainless steel

## VEIT 8940 DOUBLE LEGGER TROUSER PRESS

### VEIT 8940 DOUBLE LEGGER TROUSER PRESS

The new double legger trouser press for any business with a high share of trouser pressing. Its easy handling and ergonomic operating are unique. After only a short introduction to the machine, the operator can finish up to 40 trousers per hour.

The upper pressing plate closes with two movements. This increases the loading area for positioning and allows the operator an unobstructed view to the garment. Pressure is spread evenly across the entire pressing surface.



#### STRETCHING DEVICE

Stretching device for head buck and lower buck: trouser seams are stretched in order to avoid marks from side seams and in crotch area. The lower stretching device relaxes only after the trouser has been removed. Thus, the garment is protected from any impairment to the pressing result.



#### STEAM EDGE SUCTION

The steam edge suction prevents damage to previously finished parts during the pressing process, which increases quality. The separate suction in the lower buck allows easy positioning of the trouser legs.



# VEIT 8910 UNIVERSAL PRESS / 8920 FAST-BACK PRESS

## VEIT 8910 UNIVERSAL PRESS


The VEIT 8910 Universal Press has a conventional circular closing process. There is a fast pressure regulator with pressure manometer in the operating area. Through a single move, the pressure can be individually adjusted from 0 to 6 bar. The safety frame at the upper buck as well as the timer control for automated ironing operation and the powerful suction and blowing device come as standard.



An optional ironing unit can be added to all presses. Marks can thus be easily removed or small touch-ups performed.



The special form of the lower buck allows the pressing of a trouser leg in one single step. Unwanted marks are avoided by the cover system and the variable pressure settings.

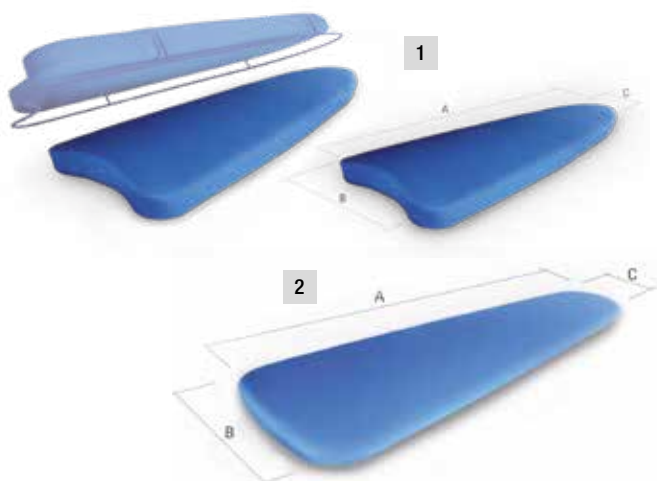

## VEIT 8920 FAST-BACK PRESS

The closing movement of the upper buck occurs in two steps: First, it comes in a tilting motion from behind and then closes vertically. With the cast-in heating system in the upper buck you save energy by up to 25 %. The suction and blowing unit as well as the steam spraying unit in the lower buck come as a standard.

The manual foot switch panel has four functions: suction, blowing, bottom steam and closing of upper buck.

The timer control guarantees a systematic pressing process. Optionally, individual garments can be pressed manually.



	A	B	C	
1	1147	456	310	mm
2	1203	362	174	mm
	1280	398	255	mm

## VEIT UF 30 UNIVERSAL FINISHER / SPOT REMOVAL

### VEIT UF 30 UNIVERSAL FINISHER

The VEIT UF 30 is a flexible and versatile Universal Finisher with an extremely favorable price / performance ratio - Made in Germany. With the new model UF 30, you win the multiplicity of finishing for your company. Multipurpose: T-Shirts, polos, blouses, dresses, skirts, blousons, jackets, sport jackets, coats and much more. User friendly: Adjustable bust height for ergonomical loading and unloading.



### VEIT 7406 PRE-SPOTTING CABIN

The large aluminium hood with strong permanent suction, spotting agent deposit and integrated lighting system makes working easy. The perforated stainless steel work surface with spill tray for liquids and spray pistol for air and liquids come as standard. The VEIT 7406 pre-spotting cabin is also available with a swivelling spotting unit with suction and liquid discharge, and also in a small version with 900 mm width.



### VEIT 7404 SPOTTING TABLE

This spotting table for professional dry-cleaning is equipped with strong suction and a continuously adjustable control unit for the steam and air pistol. The work surface made of stainless steel with spotting agent deposit and lighting provide the best working conditions for handling the garment. A swivelling spotting arm, an air-/liquid pistol with reservoir, and suspension facilities come as a standard with the VEIT 7404. Suctioning from the surface or the spotting arm is activated by foot pedal.



### VEIT 2217 DETASET

Consisting of a control unit and spotting pistol, VEIT Detaset provides the exact amount of steam and air required.



### POST-SPOTTING UNIT

With its special stainless steel spotting arm, this unit optimizes your workplace equipment. Suction is activated over the foot pedal when the arm is extended.

# VEIT TUNNEL FINISHER

## BIG CHALLENGES FOR THE FINISHING TECHNOLOGY

Based on our high expectations on finishing technology, we have developed the VEIT Tunnel Finishers. The textile care industry benefits from our know-how from having installed over 1,000 VEIT Tunnel Finishers in the textile refinishing sector. As a result, we can offer the ideal Tunnel Finisher for finishing both wet and dry-cleaned garments. Nursing and retirement homes also rely on VEIT products. Be it for industrial dry cleaning, laundries or for finishing uniforms, our project team will find the perfect solution for you.




**250 to 1,500 pieces / hour for dry garments.**

**Processes garments with up to 25 % residual moisture!**

## INDIVIDUAL MODUL CONFIGURATION

Each machine installation is tailor-made for the customer. The VEIT modular system enables us to best meet customer requirements. It consists of steam modules and air modules. In addition to these base models, different options can be added according to the requirements. For this reason, we can adjust our Tunnel Finishers individually to completely fulfil the needs of our customers: from the basic, economically priced standard unit with steam and air modules to our Tunnel Finisher with the new Cotton Care unit for finishing demanding fabrics.

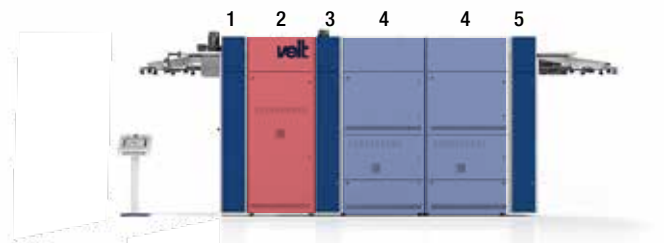

For example: individual modul configuration

1 = entry rollers 2 = steam chamber 3 = roller unit 4 = air chamber 5 = exit rollers



## VEITouch CONTROL UNIT

The Tunnel Finisher and the conveyor are controlled via the touchscreen with its matching symbols on the display. These can be modified by pressing them on the screen, or they can be set to the desired value.



The VEIT transport hook system with the broad surface contact of the clothes hangers ensures smooth transport even at high speeds.



# VEIT TUNNEL FINISHER

## Consistent finishing quality for any material

Thanks to the adjustable level of humidity in the spraying steam

## Safe transport of the goods

with the conveyor and the VEIT hook system

## Clearly separated processes

With roller unit between preconditioning and finish

## No Condensate at conveyor

Suction at the entry prevents the formation of drops or stains on the garment

## Finishing process visualized

The modern touch display can be flexibly positioned

## Efficient pre-conditioning of natural fibres

The moisture unit moisturizes the garments in order to achieve a never before seen finishing performance

## Lower part of steam unit can be switched off when finishing basic garments

Yet another energy-saving feature



**High blowing power**

The new generation of blowers is highly efficient and energy-saving, with minimum noise emission

**Optimized finishing result**

The extended air module increases performance

**Maintenance-free chain tensioning system**

The pneumatic transport hook system is nearly free from wear and tear

**Adjustable separation between steam and air module**

Avoids marks on the goods during the finishing process

**Impressive steam doll effect**

The high-volume exit module adds extra volume to the garment



## COMPACT FINISHER CF 20

### Our big little one

We have adapted our proven Tunnel Finisher technology to your company size!

With the new CF 20 Compact Finisher, you can take the next step towards automated finishing of your garments in smaller quantities.



For medium-sized businesses including:

- > E-commerce retailers
- > Clothing production
- > Laundries
- > Dry cleaners
- > and many more

## COMPACT FINISHER CF 20

### Sluice gate separation unit

**INSIDE:** Process separation between steam and air unit

**OUTSIDE:** Energy efficiency through hermetic sealing

### Air unit

High blower output for optimum finish of the fabric

### Transport System

Safe transport of the goods with proven VEIT hook system

### Steam unit

Regulated steam moisture for consistent quality

### Control

User-friendly due to intuitive operating concept



#### Your Benefits:

##### Perfect finish result

- > Due to longer exposure time on the textile in a closed atmosphere

##### Easy integration

- > Into existing processes for efficient work flows
- > Into existing logistics systems

##### Time saving

- > Through automatic loading and unloading
- > The automated process creates free capacities

##### Space-saving

- > Due to compact size

##### Steam unit

- > Even steaming for consistent and effective finish results

##### Air Unit

- > Consistent, energy-efficient drying and smoothing


##### Touch Screen

- > Centralised control through the user-friendly operating unit


##### Maintenance and Service

- > For the CF 20 Compact Finisher, VEIT offers online support as an optional service. Your benefit: short reaction times in the event of malfunctioning or production standstills. Processes can be addressed directly at any time.


## VEIT SMART ENGINEERING / VEITOUCH

- 


**BODY FIT**

  - › Optimal forming due to 3-D movable tensioning elements
  - › Automatic adjustment of size from XS to XXXL
  
- 


**BELT DRIVE**

  - › Belt drive for a smooth and gentle movement of the tensioning unit
  - › Precise re-stretching during the finish process
  
- 

**O-STRETCH**

  - › Prevents damage as a result of overstretching
  - › Integrated re-stretch function prevents wrinkles
  
- 

**D-AIRFLOW**

  - › Fast efficient drying
  - › Maximum temperature efficiency
  
- 

**VEITOUCH**

  - › Intuitive operation by touch screen control
  - › Quick and easy error analysis for service purposes

### VEITouch

The VEITouch-Control is equipped with a 5.7" touch screen colour display which shows all functions and parameters at one glance. Also, you can store program settings and retrieve when needed.

For service and maintenance purposes, all functions can be manually controlled through the display. All input and output functions can be checked at the display. Thus, any defective parts can be identified quickly in the event of disorders. This keeps service costs low.



The following VEIT products are equipped with VEITouch:



VEIT 8363 MULTIFORM CLASSIC



VEIT SF 26 SHIRT FINISHER



VEIT 8900 SHIRT PRESS



## VEIT SERVICE – USE THE BEST



### APPLICATION TRAININGS

With their on-site trainings for all VEIT products, our professional application experts offer you an efficient and economic way of teaching new staff or of brushing up your existing staff's knowledge.

Our application consultants supply highly qualified on-site training and in-depth information both on new and on existing machines and all types of VEIT technology. We will find the best solution for the ironing and finishing challenges you are facing. Are you interested in an on-site application training?

**Please contact us on +49 (8191) 479-100 or send an e-mail to [seminar@veit.de](mailto:seminar@veit.de).**



VEIT. USE THE BEST.



### VEIT INTENSIVE IRONING SEMINARS

VEIT offers one-day Intensive Ironing Seminars. In small groups (8–14 participants) our experts of many years share their theoretical and hands-on experience with you. Your benefit are excellent ironing results. Your customers will be love it.

**Topics:**

Fabrics, ironing methods, finishing techniques and more. Of course, we will be happy to fine-tune the focus of the seminars to your requirements.

**Target group:**

These seminars are beneficial for both new and experienced staff.

VEIT Ironing Seminars are held in our showrooms in Landsberg am Lech, in GroBostheim (near Frankfurt) or directly at your premises.

**For more information, please contact us on +49 (8191) 479-100 or [seminar@veit.de](mailto:seminar@veit.de).**

We are looking forward to hearing from you.

# PRODUCT OVERVIEW PAGE 2-9

Page	Picture	Description / Technical Data	Article-No.
Page 2	 	<b>VEIT HP 2003 HIGH-PRESSURE IRON</b> connected load 1250 W / 230 V steam pressure 3-5 bar   steam consumption approx. 2.2 kg/h   weight 1.3 kg	without VEITronic with VEITronic <b>121 812 000 0</b> <b>121 822 000 0</b>
		<b>VEIT 2129 THERMOSTAT IRON</b> connected load 900 W / 230 V steam pressure 3-5 bar   steam consumption approx. 2 kg/h   weight 1.5 kg	with VEIT plug with square plug <b>148 099</b> <b>149 866</b>
		<b>VEIT 2210 CONNECTION UNIT CONDENSER</b> up to 6 bar operating pressure <b>VEIT 2210 CONDENSOR</b> with support stand and condensate trap <b>VEIT 2215 STEAM ADAPTER</b> control unit for high-pressure steam consumers with up to 5 bar operating pressure	<b>122 102 000 0</b> <b>122 102 001 0</b> <b>122 152 000 0</b>
Page 3	    	<b>VEIT 2373 STEAM GENERATOR</b> dimensions mm: W 790 D 620 H 1210   weight 121 kg   steam 5.0 bar connected load	steam / max 18 kg/h 24 kg/h 33 kg/h 41 kg/h <b>156 957</b> <b>156 958</b> <b>156 959</b> <b>156 960</b>
		<b>VEIT 2381 STEAM GENERATOR</b> dimensions mm: W 1074 D 770 H 956   weight 340 kg   steam 6 bar connected load	steam / max 55 kg/h 68 kg/h 82 kg/h <b>123 811 002 0</b> <b>123 811 003 0</b> <b>123 811 004 0</b>
		<b>VEIT SG 66 STEAM GENERATOR</b> dimensions mm: W230 D290 H 530   weight 35 kg   steam 3.5-5.0 bar connected load	steam / max 3.0 kg/h <b>152 270</b>
		<b>VEIT SG 67 STEAM GENERATOR / 4.4 kW</b> dimensions mm: W 305 D 652 H 812   weight 40 kg   steam pressure 3.5-5.0 bar connected load	steam / max 6.0 kg/h <b>150 000</b>
		<b>VEIT SG 67 STEAM GENERATOR / 2.2 kW</b> dimensions mm: W 305 D 652 H 812   weight 40 kg   steam pressure 3.5-5.0 bar connected load	steam / max 3.0 kg/h <b>150 042</b>
		<b>VEIT SG 66 MF</b> dimensions mm: W 253 D 622 H 420   weight 32 kg   steam pressure 3.5-4.0 bar connected load	steam / max 3.0 kg/h <b>152 244</b>
Page 4/5	 	<b>VEIT VARIOSET CR2 IRONING TABLE</b> dimensions mm: W 1620 D 700 H 2100 with lighting   ironing surface 1400 x 500 x 300 weight	connected load 0.55 kW / 400 V <b>117 250</b>
		<b>VEIT VARIOLINE CR2 IRONING TABLE</b> (Data like VEIT VARIOSET CR 2) weight	connected load 0.95 kW / 230 V <b>117 253</b>
		<b>SPOTTING UNIT</b> with swivelarm bracket and stainless steel spotting arm	for Varioset for Varioline <b>249 131 092 G</b> <b>124 534</b>
Page 6/7	 	<b>VEIT 8363 MULTIFORM FINISHER BASIC</b> dimensions in mm (without operating unit): W 744 D 1020 H 1460-2260 with bust   weight 165 kg connected load 1.5 kW / 230 V   air pressure connection DN 6/6 bar   consumption approx. 30 l/h steam/condensate connection R 1/2"   steam pressure 5-6 bar   steam consumption approx. 10 kg/h	<b>141 200</b>
		<b>VEIT 8363 MULTIFORM FINISHER BASIC WITH STEAM GENERATOR</b> connected load 10.5 kW / 400 V   steam pressure 5 bar   weight 175 kg	<b>140 050</b>
		<b>VEIT 8363 MULTIFORM FINISHER CLASSIC</b> dimensions in mm (without operating uni): W 980 D 1160 H 1570-2370 with bust   weight 200 kg connected load 1.5 kW / 230 V   air pressure connection DN 6/6 bar   consumption approx. 30 l/h steam/condensate connection R 1/2"   steam pressure 5-6 bar   steam consumption approx. 15 kg/h	<b>143 250</b>
		<b>VEIT 8363 MULTIFORM FINISHER CLASSIC WITH STEAM GENERATOR</b> connected load 10,5 kW / 400 V   steam pressure 6,5 bar   weight 220 kg	<b>142 550</b>
Page 8/9	 	<b>VEIT 8741 PANTS FINISHER LONGITUDINAL TENS.</b> dimensions mm: W 615 D 950 H 199   weight 160 kg connected load 1.0 kW / 230 V   air pressure connection DN 6/6 bar   consumption approx. 30 l/h steam/condensate connection R 1/2"   steam pressure 5-6 bar   steam consumption approx. 10 kg/h	<b>187 412 001 0</b>
		<b>VEIT 8741 PANTS FINISHER LONGITUDINAL TENSIONER WITH STEAM GENERATOR</b> connected load 10 kW / 400 V   steam pressure 5 bar   weight 180 kg	<b>187 412 003 0</b>
		<b>VEIT 8741 PANTS FINISHER LATERAL TENSIONER</b> (Data like VEIT 8741 without SG) weight 190 kg	<b>187 412 000 0</b>

Subject to alterations. All specifications have been made to the best of our knowledge.

Page	Picture	Description / Technical Data	Article-No.
Page 10/11		<b>VEIT 8319 UNIVERSAL FINISHER</b> dimensions in mm: W 2150 D 1500 H 1720   weight 195 kg connected load 2.6 kW / 400 V   air pressure connection DN 6/6 bar   consumption approx 25 l/h steam/condensate connection R 1/2"   steam pressure 5-6 bar   steam consumption approx ca 30 kg/h	117 249
		<b>VEIT 8319 E SHIRT FINISHER (ELECTRICALLY HEATED)</b> dimensions in mm: W 2150 D 1500 H 1720   weight 195 kg connected load 17 kW / 400 V   air pressure connection DN 6/6 bar   consumption approx 25 l/h	133 940
Page 12/13	 	<b>VEIT SF 26 SHIRT FINISHER PREMIUM WITH BUST SL</b> dimensions in mm: W 2670 D 1210 H 1660   weight 290 kg   bust perimeter 780-940 mm connected load 3,3 kW / 400 V   air pressure connection DN 6/6 bar   consumption approx 11 l/h steam/condensate connection R 1/2"   steam pressure 6 bar   steam consumption approx 55 kg/h	153 037
		<b>VEIT SF 26 SHIRT FINISHER BASIC WITH BUST S (BLOUSES)</b> (Data like VEIT SF 26 PREMIUM L) bust perimeter 690 mm	153 193
		<b>OPTIONS:</b> Heat recovery: dimensions in mm: W 1580 D 1680 H 2500   weight 100 kg   connected load 1.5 kW / 400 V Moisture control	116 650 135 585
Page 14		<b>VEIT 8900 SHIRT PRESS</b> dimensions in mm: W 2250 D 1450 H 1900   weight 630 kg connected load 2.9 kW / 400 V   air pressure connection DN 6/6 bar   consumption approx 360 l/h steam/condensate connection R 1/2"   steam pressure 5-6 bar   steam consumption approx 30 kg/h	139 293
Page 15		<b>VEIT 8905 COLLAR / CUFF PRESS STEAM HEATED</b> dimensions in mm: W 1200 D 850 H 1950   connected load 0.9 kW / 230 V   weight 190 kg air pressure connection DN 6/6 bar   consumption approx 50 l/h steam/condensate connection R 1/2"   steam pressure 5-6 bar   steam consumption approx. 8-10 kg/h	117 246
		<b>VEIT 8905 COLLAR / CUFF PRESS ELECTRICALLY HEATED</b> dimensions in mm: W 1200 D 850 H 1950   connected load 3.3 kW / 400 V   weight 190 kg air pressure connection DN 6/6 bar   consumption approx 50 l/h	120 887
Page 16		<b>VEIT 8940 DOUBLE LEGGER TROUSER PRESS</b> dimensions in mm: W 2260 D 1945 H 2200   weight 820 kg   connected load 0.4 kW / 230 V / 50/60 Hz connection: steam 5-7,5 bar 3/8"-2x1/2"   condensate 2x3/8"   suction 2x1 1/2   compressed air 6 bar - 12mm consumption: steam 32 kg/h   suction 7200 l/min   compressed air 92 l/min.	150 279
Page 17		<b>VEIT 8910 UNIVERSAL PRESS</b> dimensions in mm: W 1600 D 1300 H 1400   weight 340 kg connected load 0.62 kW / 400 V   air pressure connection DN 6/6 bar   consumption approx. 50 l/h steam/condensate connection R 1/2"   steam pressure 5-6 bar   steam consumption approx. 32 kg/h	117 247
		<b>VEIT 8920 FAST-BACK PRESS</b> dimensions in mm: W 1600 D 1300 H 1400   weight 340 kg connected load 0.62 kW / 400 V   air pressure connection DN 6/6 bar   consumption approx. 50 l/h steam/condensate connection R 1/2"   steam pressure 5-6 bar   steam consumption approx. 15 kg/h	117 248
Page 18		<b>VEIT 7404 SPOTTING TABLE</b> dimensions in mm: W 1200 D 400 H 1850   weight 75 kg   connected load 0.55 kW / 230 V	174 042 000 0
		<b>VEIT 7406 PRE-SPOTTING CABIN WITH POST-SPOTTING ARM</b> dimensions in mm: W 1300 D 600 H 1740   weight 110 kg   connected load 0.85 kW / 230 V	174 062 002 0
		<b>VEIT 7406 PRE-SPOTTING CABIN WITHOUT POST-SPOTTING ARM</b> dimensions in mm: W 1200 D 600 H 1740   weight 100 kg   connected load 0.3 kW / 230 V	174 062 003 0
		<b>VEIT UF 30 UNIVERSAL FINISHER</b> dimensions in mm: W 900 D 810 H 1600 with bust   weight 95 kg connected load 2 kW / 200-240 V   steam/condensate connection R 1/2"   steam pressure 4-6 bar   steam consumption 16,5 kg/h	165 750
		<b>VEIT 2217 DETASET</b> with control unit and spotting pistol for VEIT 7406 connected load 230 V/30 W for connection to steam line / steam generator and pressure line	122 172 000 0

It is in the third generation now that our German family-run business, founded in 1956 by Reinhard Veit, is the epitome for innovative products and services that set technological standards. The founder's son Günter Veit joined the company in 1975. Now, his grandson Christopher Veit has followed suit. Thus, VEIT continues to develop solutions for today's technological challenges. Over almost 60 years, our company has made its way to become the leading manufacturer of machines and equipment for ironing, fusing, pressing and refinishing of garments.

From the very beginning, we have considered our customers' challenges and requirements in more than 100 countries as our most important priority. Our products range from traditional ironing tables with hand-irons and steam generators to ironing presses, from form finishers and fusing machines to automated units such as tunnel finishers and bagging machines. All our products are designed to achieve the highest fusing and finishing quality with minimal processing time.

Our experienced consultants will work out with you the most economic and efficient solution for your individual requirements. No matter if you wish to purchase a single machine or are planning a completely new project, we are by your side, partnering with you for quality, efficiency and service.

We look forward to getting in touch with you in person!



Your local VEIT sales agent:

**VEIT GmbH**

Justus-von-Liebig-Str. 15  
86899 Landsberg/Lech  
Germany

Tel. +49 (8191) 479-100

Fax +49 (8191) 479-149

E-Mail: [textilecare@veit.de](mailto:textilecare@veit.de)

[www.veit-group.com](http://www.veit-group.com)

